

Preface

This instruction manual provides basic installation and setup information for BE1-11 Protection Systems. To accomplish this, the following information is provided:

- BESTCOMS[®] software installation and operation
- Power supply connections
- Settings configuration
- Programming BESTlogic[™]Plus programmable logic

For complete information on a specific BE1-11 Protection System, refer to one of the following instruction manuals:

- BE1-11*d*, DC Power Protection System, Publication 9424200761
- BE1-11*f*, Feeder Protection System, Publication 9424200990
- BE1-11*g*, Generator Protection System, Publication 9424200994
- BE1-11*i*, Intertie Protection System, Publication 9424200993
- BE1-11*m*, Motor Protection System, Publication 9424200996
- BE1-11*t*, Transformer Protection System, Publication 9424200995

Conventions Used in this Manual

Important safety and procedural information is emphasized and presented in this manual through warning, caution, and note boxes. Each type is illustrated and defined as follows.

Warning!

Warning boxes call attention to conditions or actions that may cause personal injury or death.

Caution

Caution boxes call attention to operating conditions that may lead to equipment or property damage.

Note

Note boxes emphasize important information pertaining to installation or operation.