


Contact-Optima 3100.4026



Optima-Plus connectors, internal element:

supplied with Article 3020.400xC /
3020.410xC and 3031.4006C
incl. Torx screws

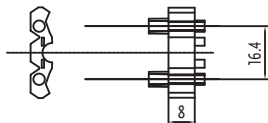


Optima-Plus connectors, external element:

3020.400xC discharge to compensation chamber
3020.410xC discharge to C-rail
3031.4006C resistor

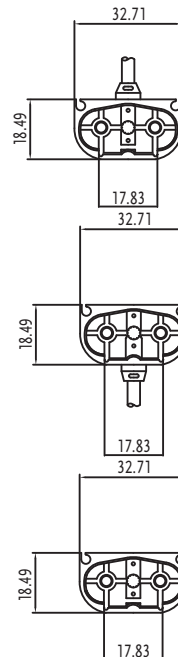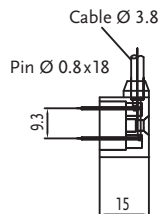


Rubber cap:

3050.4026
for profile 3100.4026
(fits all external elements)

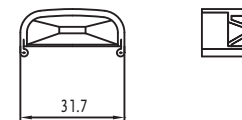


Contact-Optima 3100.4026:

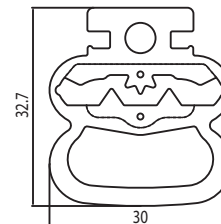

Contact-Optima 3100.4026N



Optima-Plus connectors, internal element:

supplied with Article 3020.400xC /
3020.410xC and 3031.4006C
incl. Torx screws

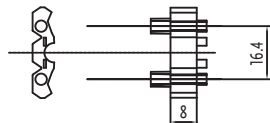


Optima-Plus connectors, external element:

3020.400xC discharge to compensation chamber
3020.410xC discharge to C-rail
3031.4006C resistor

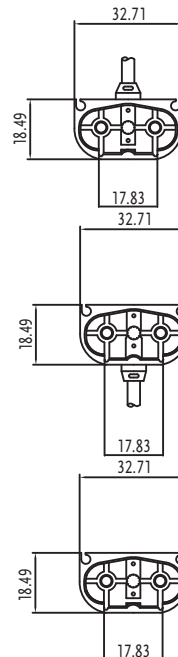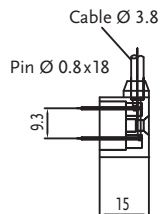


Rubber cap:

 3050.4026N
for profile 3100.4026N
(fits all external elements)




Contact-Optima 3100.4026N:

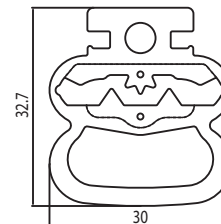

Contact-Optima 3100.4053



Optima-Plus connectors, internal element:

supplied with Article 3020.400xC /
3020.410xC and 3031.4006C
incl. Torx screws

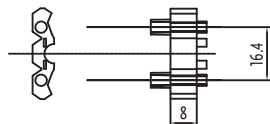


Optima-Plus connectors, external element:

3020.400xC discharge to compensation chamber
3020.410xC discharge to C-rail
3031.4006C resistor

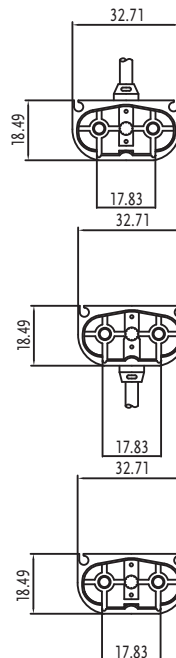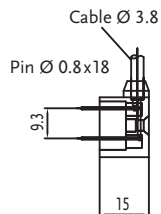

Rubber cap:

3050.4053
for profile 3100.4053
(fits all external elements)

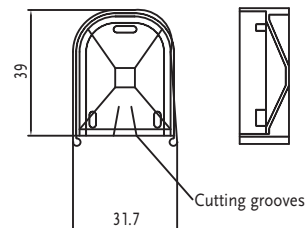

Contact-Optima 3100.4053:

