


GLOBE-VALVE DIRECT ACTION

- *1 AIR EXHAUST POSITION FOR Ø270.
*2 AIR EXHAUST POSITION FOR Ø350 & Ø450.

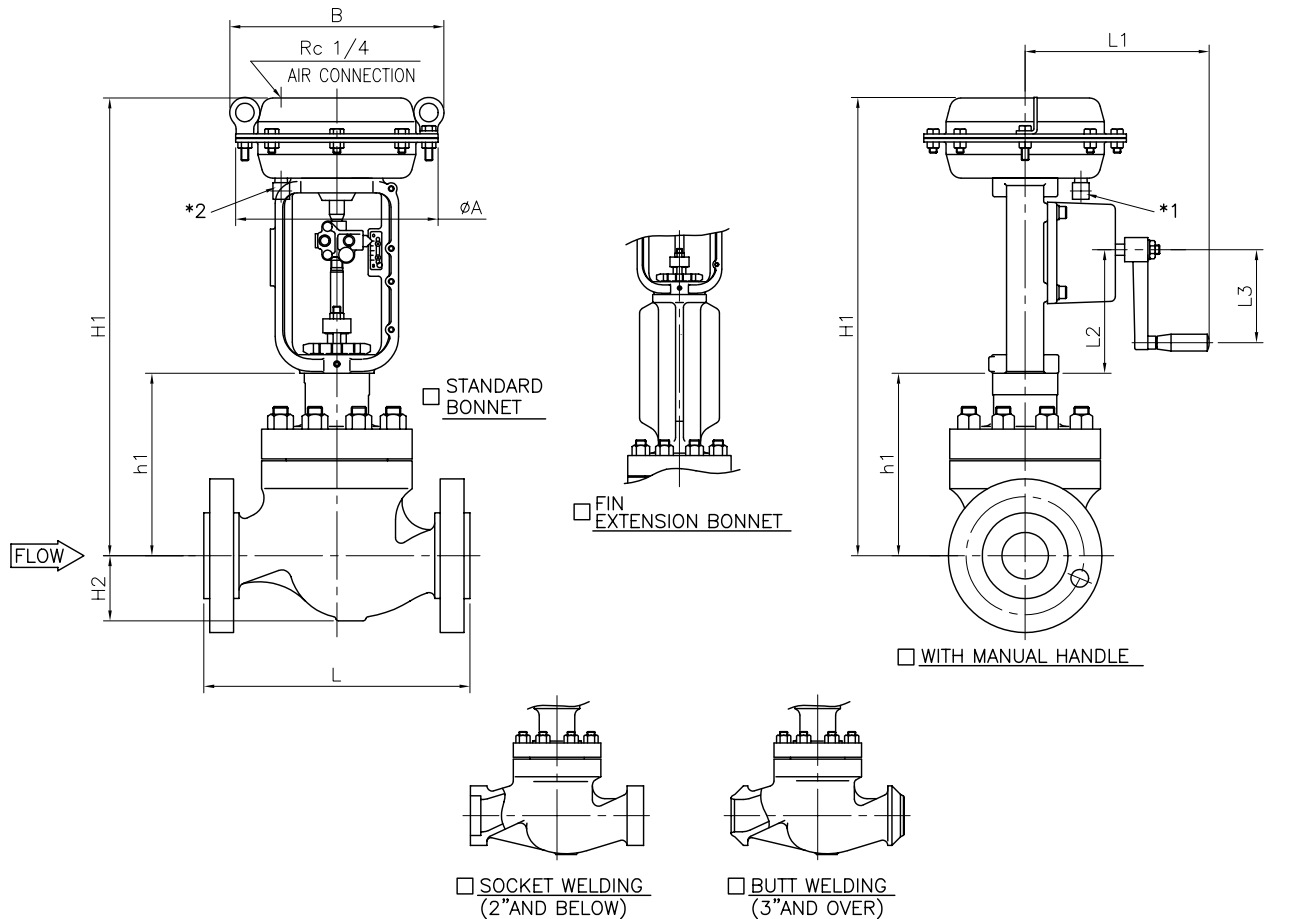

DIMENSIONS

UNIT : mm

VALVE SIZE		FACE TO FACE :L							H2	□ STANDARD BONNET		□ FIN EXTENSION BONNET		ACTUATOR						
		□ ANSI 150#RF □ JPI 150#RF □ JIS 10k RF	□ ANSI 300#RF □ JPI 300#RF □ JIS 20k RF □ JIS 30k RF	□ ANSI 600#RF □ JPI 600#RF □ JIS 40k RF	□ ANSI 300#SW 300#BW □ JPI 300#BW	□ ANSI 300#RTJ □ JPI 300#RTJ	□ ANSI 600#SW 600#BW □ JPI 600#BW	□ ANSI 600#RTJ □ JPI 600#RTJ		SIZE	B	WITH MANUAL HANDLE				CODE NO.				
		A	L1	L2	L3	L4														
CODE NO.										h1	H1	h1	H1	A	B	L1	L2	L3	L4	CODE NO.
93	□ 1½" (40A)	222	235	251	251	248	251	251	60	175	570	325	720	□ 270	283	230	160~135	100	27.5	5227LA
										605	755		□ 350	367	230	168~143	100	27.5	5235LA	
										670	820		□ 450	472	336	205~180	160	32	524SLA	
02	□ 2" (50A)	254	267	286	286	283	286	289	70	196	595	346	745	□ 270	283	230	165~135	100	27.5	5227LA
										630	780		□ 350	367	230	173~143	100	27.5	5235LA	
										695	845		□ 450	472	336	210~180	160	32	524SLA	
03	□ 3" (80A)	298	317	337	317	333	337	340	98	201	635	351	785	□ 350	367	230	183~143	100	27.5	5235LA
										700	850		□ 450	472	336	220~180	160	32	524SLA	
04	□ 4"x3" (100AX80A)	352	368	394	368	384	394	397	113	275	770	425	920	□ 450	472	336	220~180	160	32	524SLA

* FLANGE IS ACCORDING TO THE STANDARD WHICH IS DESCRIBED ON SPECIFICATION SHEET.

NOTE:

DRAWING No.

E-501G-5200LA-D-N
S

REV.

E

KOSO