


286 DN 12-15

The 286 is a manually operated diaphragm valve of reduced dimensions and particularly compact structure, ideal for use in confined spaces.

COMPACT DIAPHRAGM VALVE

- Connection system for solvent weld and threaded joints
- Extremely compact construction
- **Internal operating components in metal totally isolated from the conveyed fluid**
- Valve stem in STAINLESS steel
- **Compressor with floating diaphragm support**
- Easy to replace diaphragm seal
- Corrosion-proof internal components
- **CDSA** (Circular Diaphragm Sealing Angle) system offering the following advantages:
 - uniform distribution of shutter pressure on the diaphragm seal
 - reduction in the tightening torque of the screws fixing the actuator to the valve body
 - reduced mechanical stress on all valve components (actuator, body and diaphragm)
 - easy to clean valve interior
 - low risk of the accumulation of deposits, contamination or damage to the diaphragm due to crystallisation
 - operating torque reduction

Technical specifications	
Construction	Compact single wear diaphragm valve
Size range	DN 12-15
Diaphragm size	MA 10
Nominal pressure	PN 6 with water at 20 °C
Temperature range	PVC-U: 0 °C - 60 °C - PVC-C: 0 °C - 100 °C PP-H: 0 °C - 100 °C - PVDF: -20 °C - 120 °C
Coupling standards	Solvent welding / Welding: EN ISO 1452, EN ISO 15493, BS 4346-1, DIN 8063, NF T54-028, ASTM D 2467. Can be coupled to pipes according to EN ISO 1452, EN ISO 15493, DIN 8062, NF T54-016, ASTM D 1785 Thread: ISO 228-1, DIN 2999, ASTM D 2464, Flanging system: ISO 7005-1, EN ISO 1452, EN ISO 15493, EN 558-1, DIN 2501, ANSI B16.5 Cl.150, JIS B2220
Reference standards	Construction criteria: EN ISO 16138, EN ISO 1452, EN ISO 15493 Test methods and requirements: ISO 9393 Installation criteria: DVS 2204, DVS 2221, UNI 11242
Valve material	Body: PVC-U / PVC-C / PP-H / PVDF Bonnet and handwheel: PA-GR
Diaphragm material	EPDM, FPM, PTFE
Control options	Manual control; pneumatic actuator

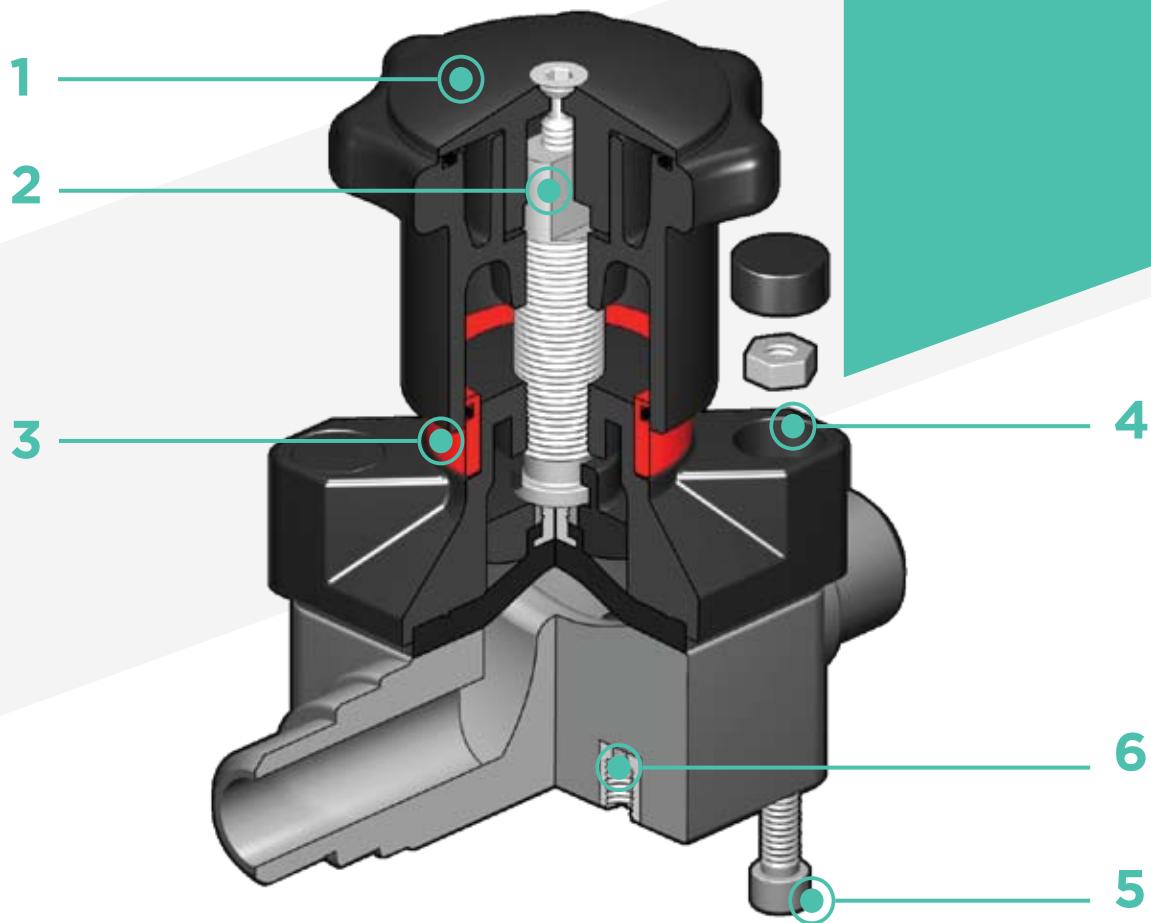

1 Handwheel in PA-GR, **completely sealed**, high mechanical strength with ergonomic grip for optimum manageability

2 **Integrated adjustable torque limiter** designed to prevent excessive compression of the diaphragm and always guarantee a minimum fluid flow

3 Optical position indicator supplied as standard

4 Bonnet in PA-GR with **STAINLESS steel nuts** fully protected by plastic plugs to eliminate zones where impurities may accumulate. Internal circular and symmetrical diaphragm sealing area


5 **STAINLESS steel bolts**, can also be inserted from above

6 **Threaded metal inserts** for anchoring the valve


TECHNICAL DATA

PRESSURE VARIATION ACCORDING TO TEMPERATURE

For water and non-hazardous fluids with regard to which the material is classified as CHEMICALLY RESISTANT. In other cases, a reduction of the nominal pressure PN is required (25 years with safety factor).

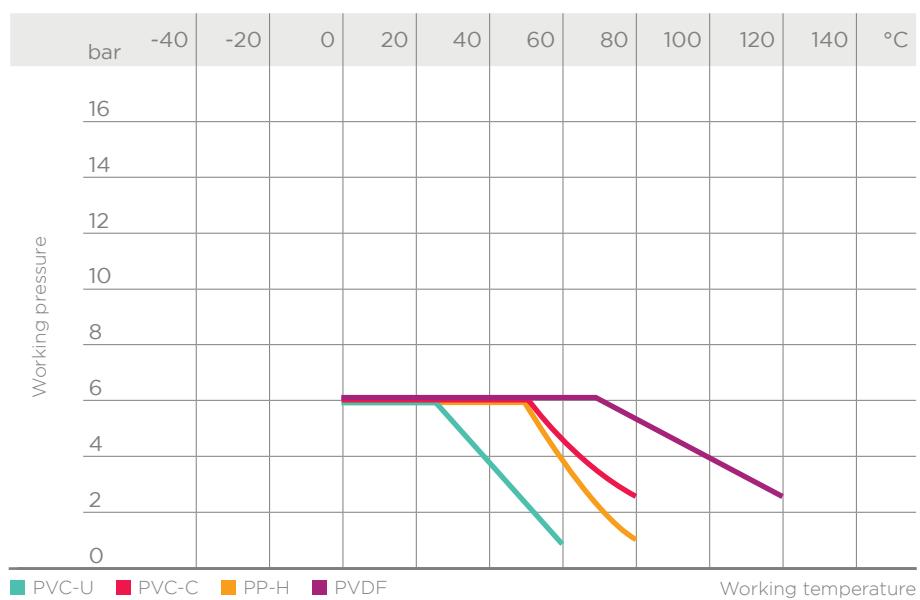

PRESSURE DROP GRAPH

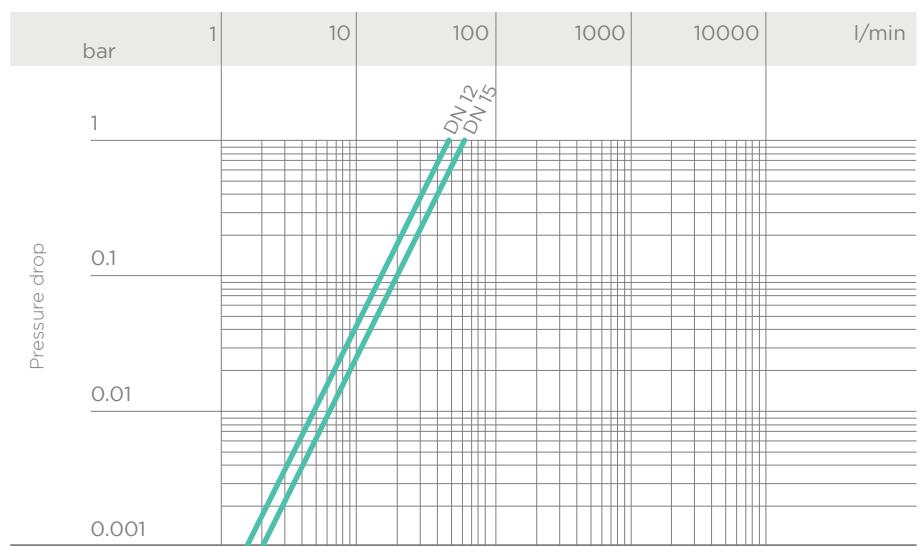

K_v100 FLOW COEFFICIENT


The K_v100 flow coefficient is the Q flow rate of litres per minute of water at a temperature of 20°C that will generate $\Delta p = 1$ bar pressure drop at a certain valve position.

The K_v100 values shown in the table are calculated with the valve completely open.

DN	K _v 100 l/min	12	15
		47	60

The information in this leaflet is provided in good faith. No liability will be accepted concerning technical data that is not directly covered by recognised international standards. SED reserves the right to carry out any modification. Products must be installed and maintained by qualified personnel.


DIMENSIONS - 286

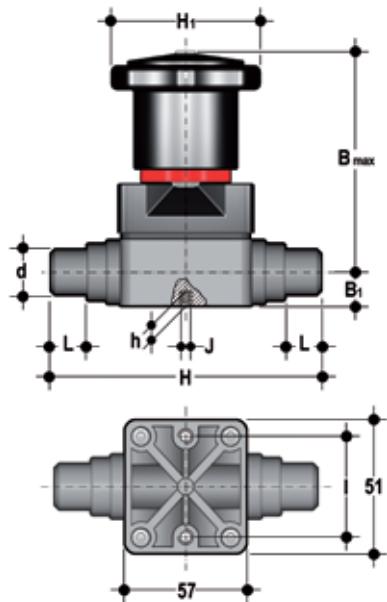

Compact diaphragm valve with **male ends** for solvent respectively socket welding, **metric series**, code 39

DN	MA	PN	B max	B ₁	d	H	h	H ₁	I	J	L	Weight (g)		
												PVC-U PVC-C	PP-H	PVDF
15	10	6	86	15	20	124	8	58.5	35	M5	17	310	260	290


Figures for PVC-U version

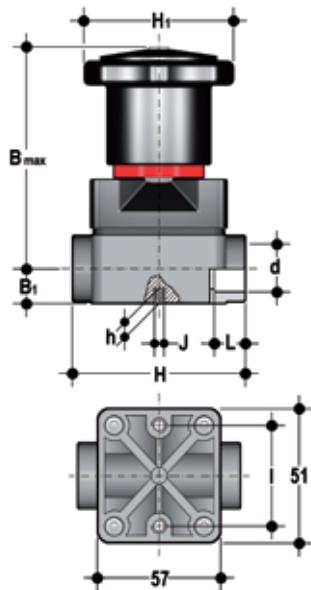

Compact diaphragm valve with **female ends** for solvent respectively socket welding, **metric series**, code 2

DN	MA	PN	B max	B ₁	d	H	h	H ₁	I	J	L	Weight (g)		
												PVC-U	PP-H	PVDF
12	10	6	86	15	16	124	8	58.5	35	M5	14	280	250	270
15	10	6	86	15	20	124	8	58.5	35	M5	16	280	250	270


Figures for PVC-U version

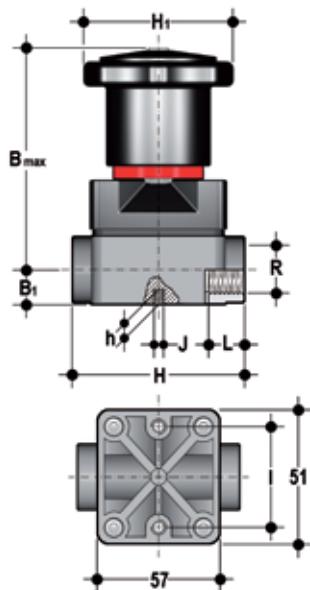

Compact diaphragm valve with **BSP threaded female ends**, code 1

DN	MA	PN	B max	B ₁	H	h	H ₁	I	J	L	R	Weight (g)		
												PVC-U	PP-H	PVDF
12	10	6	86	15	75	8	58.5	35	M5	11.5	3/8"	280	250	270
15	10	6	86	15	75	8	58.5	35	M5	15	1/2"	280	250	270


Figures for PVC-U version

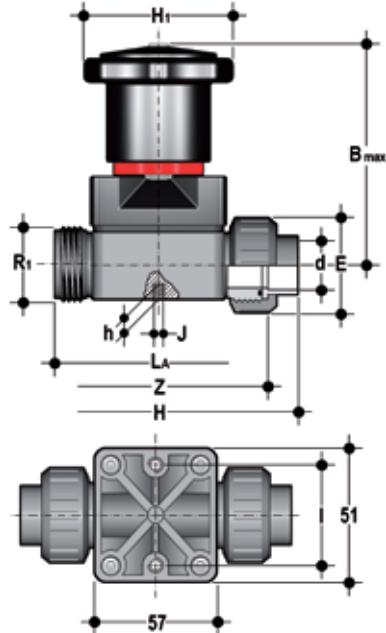

Compact diaphragm valve with **female union ends** for solvent respectively socket welding, **metric series**, code 30

DN	MA	PN	B max	d	E	H	h	H ₁	I	J	L _A	R ₁	Z	Weight (g)		
														PVC-U PVC-C	PP-H	PVDF
15	10	6	86	20	41	129.5	8	58.5	35	M5	90	1"	97.5	340	300	370

Figures for PVC-U version

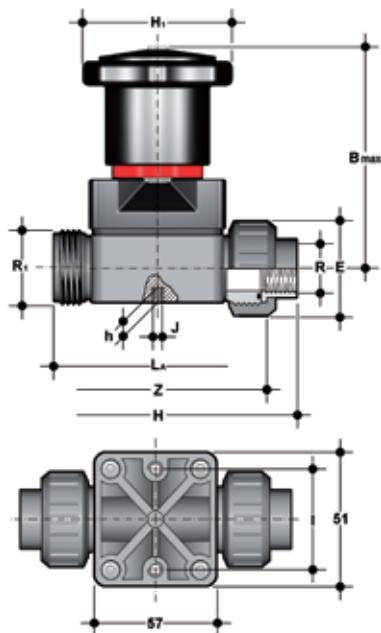


Compact diaphragm valve with **BSP threaded female union ends**, code 33

DN	MA	PN	B max	E	H	h	H ₁	I	J	L _A	R ₁	R	Z	Weight (g) PVC-U PVC-C
15	10	6	86	41	129.5	8	58.5	35	M5	90	1"	1/2"	97.5	340

Figures for PVC-U version

COMPONENTS

EXPLODED VIEW

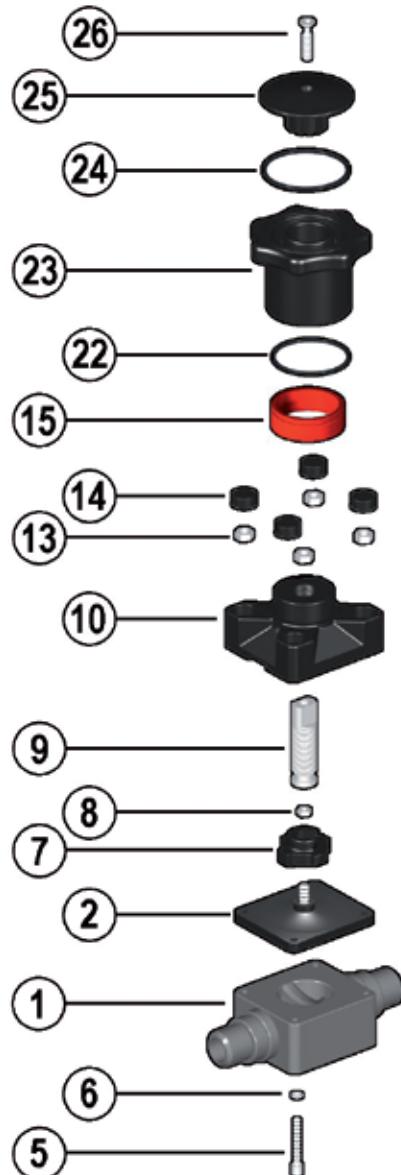

1 · Body (PVC-U - 1)	9 · Stem (STAINLESS steel - 1)	23 · Handwheel (PA-GR - 1)
2 · Diaphragm seal (EPDM, FPM, PTFE - 1)	10 · Bonnet (PA-GR - 1)	24 · O-Ring (NBR - 1)
5 · Fastening screw (STAINLESS steel - 4)	13 · Nut (STAINLESS steel - 4)	25 · Bonnet (PA-GR - 1)
6 · Washer (STAINLESS steel - 4)	14 · Protection plug (POM - 4)	26 · Fastening screw (STAINLESS steel - 1)
7 · Compressor (PA-GR - 1)	15 · Optical position indicator (PVDF - 1)	
8 · Nut (STAINLESS steel - 1)	22 · O-Ring (NBR - 1)	

The material of the component and the quantity supplied are indicated between brackets

DISMOUNTING

If the valve is already installed on the line, shut-off the fluid flow upstream and make sure that there is no pressure. If necessary, fully drain the system downstream. If there are hazardous fluids present, drain and ventilate the valve.

The diaphragm constitutes the part of the valve more subject to mechanical and chemical stress from the fluid. Consequently, the condition of the diaphragm must be checked at regular intervals in accordance with the service conditions. To do this, it must be disconnected from the handwheel and from the valve body.

- 1) Unscrew the four screws (5) and separate the body (1) from the internal components.
- 2) Unscrew the diaphragm seal (2) from the shutter (7).
- 3) If necessary, clean or replace the diaphragm seal (2).
- 4) If necessary, lubricate the stem (9).

Mounting

- 1) The diaphragm seal (2) must be screwed fully into the compressor (7) in a clockwise direction. If necessary, unscrew slightly in an anticlockwise direction to line up the screw holes.
- 2) Fix the bonnet (10) to the body (1) using screws (5). Tighten the screws, making sure not to over-compress the diaphragm.

INSTALLATION

The valve can be installed in any position and in any direction.

When starting up the plant, make sure that there are no leaks from between the diaphragm and the valve body. If necessary, tighten the fastening screws (5).

SETTING

The valve is factory set to guarantee a permanent seal without requiring any further intervention. To adjust the setting, rotate the handwheel to the required minimum opening position, remove screw (26) using a hex key.

Remove the bonnet (25) and rotate the handwheel (23) clockwise until a resistance to the rotation is felt.

If necessary, replace the O-Ring (24) in its seating and re-insert the bonnet (25) in the handwheel: the double D connection must fit over the stem (9) and, with a slight twisting action, align the ribs in the bonnet with those in the handwheel.

Tighten screw (26) to a sufficiently high torque value.

Each turn of the handwheel corresponds to 1.75mm travel.