

JUMO GmbH & Co. KG
 Delivery address: Mackenrodtstraße 14
 36039 Fulda, Germany
 Postal address: 36035 Fulda, Germany
 Phone: +49 661 6003-0
 Fax: +49 661 6003-607
 Email: mail@jumo.net
 Internet: www.jumo.net

JUMO Instrument Co. Ltd.
 JUMO House
 Temple Bank, Riverway
 Harlow, Essex, CM20 2DY, UK
 Phone: +44 1279 63 55 33
 Fax: +44 1279 62 50 29
 Email: sales@jumo.co.uk
 Internet: www.jumo.co.uk

JUMO Process Control, Inc.
 6733 Myers Road
 East Syracuse, NY 13057, USA
 Phone: +1 315 437 5866
 Fax: +1 315 437 5860
 Email: info.us@jumo.net
 Internet: www.jumousa.com



JUMO TYA S201

Single-Phase Thyristor Power Controller

for control of resistive inductive loads

The JUMO TYA S201 is the slim version of the TYA 201 JUMO power controller. The microprocessor controlled power controller displays all parameters in an LCD display with background lighting. It can be operated using the four keys at the front.

Thyristor power controllers are used where larger resistive and inductive loads have to be switched (e.g. in industrial furnace construction and plastics processing). The thyristor power controller consists of two anti-parallel switched thyristors, the insulated heat sink, and the control electronics.

Thyristor power controllers up to a load current of 50 A can either be clipped to a 35 mm mounting rail or fitted to the wall on a mounting plate.

Devices with a load current greater than 50 A can only be mounted on the wall.

In burst-firing mode, the phase angle of the first half-wave can be cut so that transformer loads can also be operated.

All thyristor power controllers are fitted with a semiconductor fuse.

For the soft start, the default phase angle of the controller is slowly reached, starting at 180 degrees, in order to avoid high starting or inrush currents.

The thyristor power controllers meet the operating conditions of DIN EN 50178.

The device has to be grounded in accordance with the regulations of the responsible energy supply company.




Type 709065/ ...

Special features

- LCD display with info line
- Simple configuration of the device through plain text display in national language
- Setup program for configuration via USB interface
- Transmission of the setup data is possible even without voltage supply to the device (USB port supplies power)
- Close mounting possible
- Network load optimization through dual energy management
- RS422/485 interface or
- PROFIBUS interface for connecting to process control systems
- Soft start function
- All versions feature protection type IP20
- Load monitoring for the detection of partial load failure or load short-circuit "Teach-In"
- Integrated diagnostic systems
- UL 508 approval

Block diagram

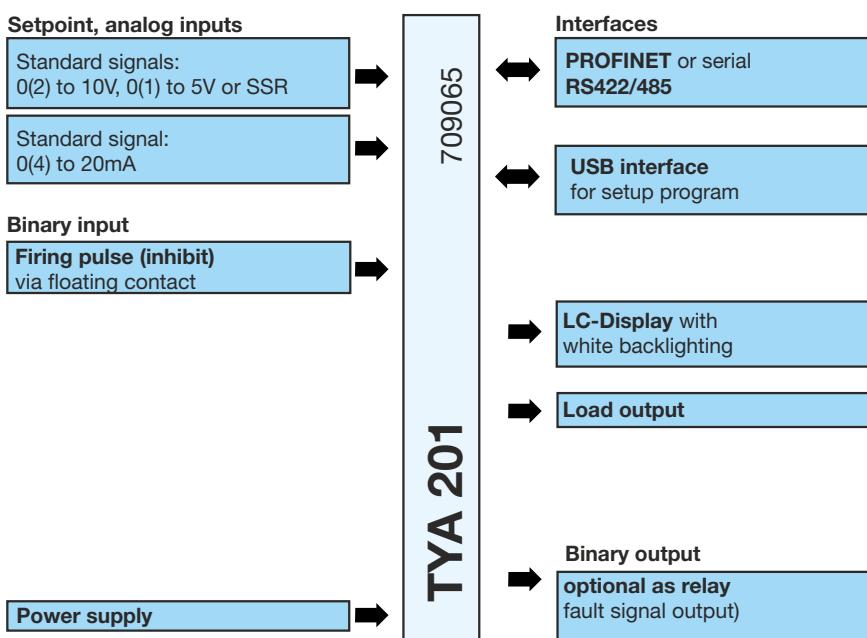

Approvals/approval marks (see "Technical data")



JUMO GmbH & Co. KG
 Delivery address: Mackenrodtstraße 14
 36039 Fulda, Germany
 Postal address: 36035 Fulda, Germany
 Phone: +49 661 6003-0
 Fax: +49 661 6003-607
 Email: mail@jumo.net
 Internet: www.jumo.net

JUMO Instrument Co. Ltd.
 JUMO House
 Temple Bank, Riverway
 Harlow, Essex, CM20 2DY, UK
 Phone: +44 1279 63 55 33
 Fax: +44 1279 62 50 29
 Email: sales@jumo.co.uk
 Internet: www.jumo.co.uk

JUMO Process Control, Inc.
 6733 Myers Road
 East Syracuse, NY 13057, USA
 Phone: +1 315 437 5866
 Fax: +1 315 437 5860
 Email: info.us@jumo.net
 Internet: www.jumousa.com



Technical data

Voltage supply, load current, fan voltage only with 250 A load current

Code	Voltage supply for control electronics = max. mains voltage	Fan specifications Type 709065/X-0X-250...
230	AC 230 V -20 % to +15 %, 48 to 63 Hz	AC 230 V/30 VA
400	AC 400 V -20 % to +15 %, 48 to 63 Hz	AC 230 V/30 VA
460	AC 460 V -20 % to +15 %, 48 to 63 Hz	AC 230 V/30 VA
500	AC 500 V -20 % to +15 %, 48 to 63 Hz	AC 230 V/30 VA
Load current $I_{L\text{rms}}$	AC 20, 32, 50, 100, 150, 200, 250 A	
Load type	Resistive and resistive inductive loads	
Control section power consumption	Max. 20 VA	

Analog inputs

Control signal	0(4) to 20 mA	$R_i = 50 \Omega$
	0(2) to 10 V	$R_i = 25 \text{ k}\Omega$
	0(1) to 5 V	$R_i = 25 \text{ k}\Omega$
Setpoint specification	Via standard signals (current, voltage) or interface	

Digital output

Relay (changeover contact) without contact protection circuit	30,000 switching operations at a switching capacity of AC 230 V / 3 A (1.5 A), 50 Hz B300 (UL 508)		
Thyristor control:	Setpoint specification current input (can carry current up to 25 mA)	Setpoint specification voltage input (surge proof up to max. DC 32 V)	Via interface
Continuous	The power controller provides the power for the load continuously depending on the configured setpoint specification.		Possible
Logic (Solid state relay SSR)	The power controller acts like a switch and switches the load ON and OFF. The switching threshold is always in the middle of the configured current/voltage range At 4 to At 20 mA, it is 12 mA; at 0 to 10 V, it is 5 V.		Possible

General specifications

Circuit options	- Single-phase operation - Star connection with accessible star point - Open delta connection (6-wire connection)
Operating modes	- Burst-firing operation for resistive or transformer load
Load types	All resistive loads through to inductive loads are permitted. In the case of transformer loads, the nominal induction of 1.2 tesla must not be exceeded (value is 1.45 T in the case of mains overvoltage).
Special features	- Dual energy management - Soft start with pulse groups
Electrical connection	For type 709065/X-0X-020... Control and load leads are connected via screw terminals. From type 709065/X-0X-032... Control cables are connected via screw terminals and load leads via cable lugs DIN 46235 and DIN 46234 or tubular cable lugs
Operating conditions	The power controller is designed as a built-in device according to EN 50 178, pollution degree 2, overvoltage category Ü III
Electromagnetic compatibility	According to DIN 61326-1 Interference emission: Class B Interference immunity: to industrial requirements
Protection type	All device types IP20 according to EN 60529
Protection rating	Protection rating I, with isolated control circuitry for connection to SELV circuits

Admissible ambient temperature range	0 to 40 °C with forced air cooling using fan for type 709065/X-0X-250... 0 to 45°C with air self-cooling (expanded temperature range class 3K3 according to EN 60721-3-3). At higher temperatures, use with reduced type current is possible (as of 45°C with type current -2%/°C).
Admissible storage temperature range	-30 to +70 °C (1K5 according to EN 60721-3-1)
Site altitude	≤ 2000 m above MSL
Cooling	- Natural convection up to a load current of 200 A - Above 200 A of load current, forced convection with installed fan - At installation heights over 1000 m, the ampacity of the power controller decreases
Resistance to climatic conditions	Rel. humidity ≤ 85 % annual average, no condensation 3K3 according to EN 60721
Installation position	Vertical
Test voltage	According to EN 50178
Creepage distances	8 mm between supply current circuit and SELV circuits for type 709065/X -0X-020... 12.7 mm between supply current circuit and SELV circuits from type 709065/X -0X-032... SELV = Safety Extra Low Voltage (safe low voltage)
Housing	Plastic, flammability class UL94 V0, color: cobalt blue RAL 5013
Power loss	The power loss can be calculated using the following empirical formula: $P_v = 20 \text{ W} + 1.3 \text{ V} \times I_{\text{Load}} \text{ A}$
Maximum temperature of the heat sink	110 °C
A/D converter resolution	12 bit

Load current	20 A	32 A	50 A	100 A	150 A	200 A	250 A
Weight	Approx. 1.1 kg	Approx. 2.1 kg	Approx. 2.7 kg	Approx. 3.8 kg	Approx. 8.5 kg	Approx. 9.5 kg	Approx. 10.2 kg

Approvals/approval marks

Approval mark	Test facility	Certificate/certification numbers	Inspection basis	Valid for type
	Underwriters Laboratories	E223137	UL 508 (Category NRNT), pollution degree 2 C22.2 NO. 14-10 Industrial Control Equipment (Category NRNT7)	709065/X-XX-020... Load current 20 A
			UL 508 (Category NRNT) C22.2 NO. 14-10 Industrial Control Equipment (Category NRNT7)	709065/X-XX-032... 709065/X-XX-050... 709065/X-XX-100... 709065/X-XX-150... 709065/X-XX-200... 709065/X-XX-250... Load current 32 to 250 A

Display and measuring accuracy

All specifications refer to the power controller nominal data.

Mains voltage: $\pm 2.5\%$

Load current: $\pm 1\%$

Load voltage: $\pm 1\%$

Analog input
Voltage/current: $\pm 1\%$


JUMO GmbH & Co. KG
 Delivery address: Mackenrodtstraße 14
 36039 Fulda, Germany
 Postal address: 36035 Fulda, Germany
 Phone: +49 661 6003-0
 Fax: +49 661 6003-607
 Email: mail@jumo.net
 Internet: www.jumo.net

JUMO Instrument Co. Ltd.
 JUMO House
 Temple Bank, Riverway
 Harlow, Essex, CM20 2DY, UK
 Phone: +44 1279 63 55 33
 Fax: +44 1279 62 50 29
 Email: sales@jumo.co.uk
 Internet: www.jumo.co.uk

JUMO Process Control, Inc.
 6733 Myers Road
 East Syracuse, NY 13057, USA
 Phone: +1 315 437 5866
 Fax: +1 315 437 5860
 Email: info.us@jumo.net
 Internet: www.jumousa.com




Admissible load current depending on the ambient temperature and the site altitude

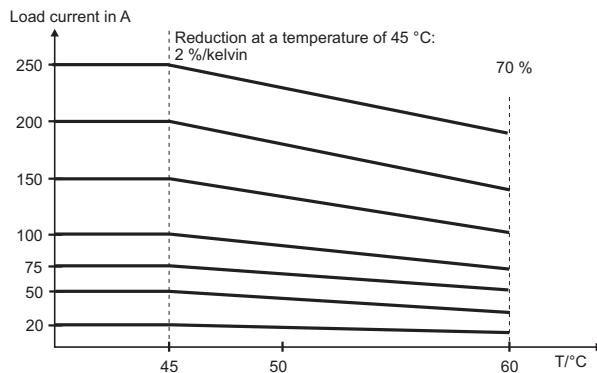

Important information:


If a device temperature exceeds 105°C, the load current is gradually reduced each time the temperature increases by one degree. At a device temperature of > 115°C, the power controller current is completely switched off.

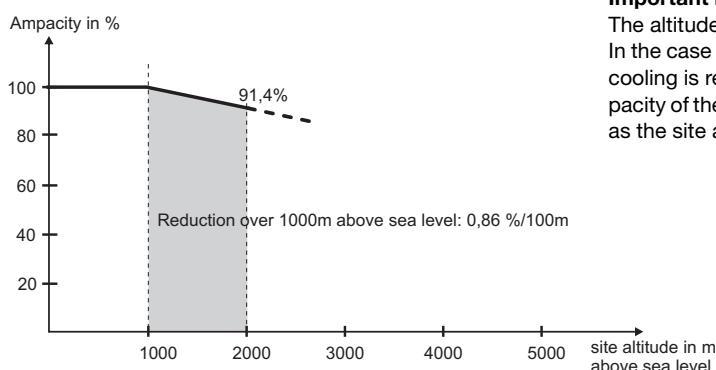

Important information:

The altitude is \leq 2000 m above MSL. In the case of air cooling, it must be noted that the effectiveness of the cooling is reduced as the site altitude increases. As a result, the ampacity of the thyristor power controller decreases with the stated cooler as the site altitude increases, as shown here in the diagram.

Galvanic isolation

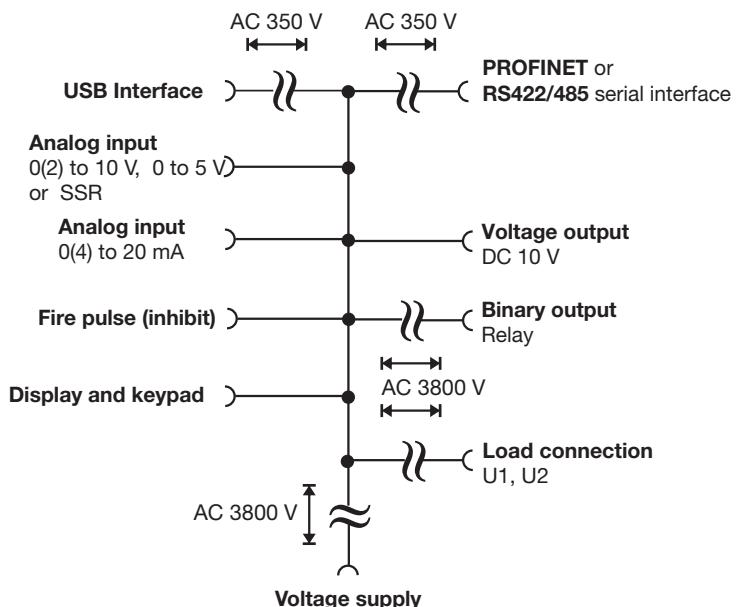

JUMO GmbH & Co. KG
 Delivery address: Mackenrodtstraße 14
 36039 Fulda, Germany
 Postal address: 36035 Fulda, Germany
 Phone: +49 661 6003-0
 Fax: +49 661 6003-607
 Email: mail@jumo.net
 Internet: www.jumo.net

JUMO Instrument Co. Ltd.
 JUMO House
 Temple Bank, Riverway
 Harlow, Essex, CM20 2DY, UK
 Phone: +44 1279 63 55 33
 Fax: +44 1279 62 50 29
 Email: sales@jumo.co.uk
 Internet: www.jumo.co.uk

JUMO Process Control, Inc.
 6733 Myers Road
 East Syracuse, NY 13057, USA
 Phone: +1 315 437 5866
 Fax: +1 315 437 5860
 Email: info.us@jumo.net
 Internet: www.jumousa.com




Display, operating, and connection elements

Legend	Comment	Diagram
1	The Power LED (green) is permanently lit when the voltage supply is connected.	
2	LCD display with white background lighting (96 x 64 pixels). The information line at the bottom of the display shows the current settings and error messages.	
3	The Fuse LED (red) lights up if the semiconductor fuse is defective	
4	LED K1 (yellow) fault signal output	
5	Keys: Value increase / previous parameter Value reduction / next parameter Cancel / back one level Programming / one level deeper	
6	USB setup interface	
7	Spring clip to release the plastic housing (press toward right)	

Dimensions

Type 709065/X-0X-020-XX-XXX-XX

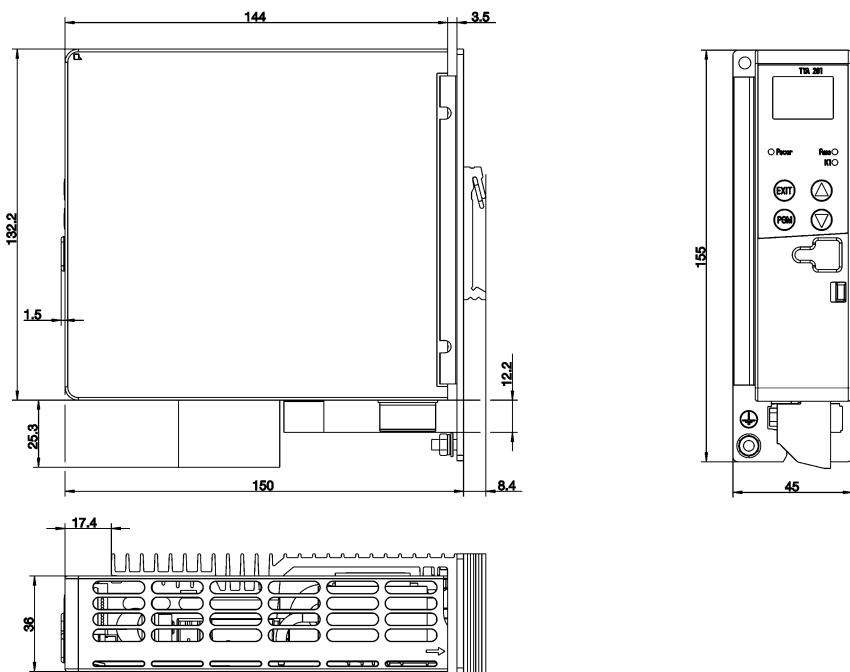




JUMO GmbH & Co. KG
 Delivery address: Mackenrodtstraße 14
 36039 Fulda, Germany
 Postal address: 36035 Fulda, Germany
 Phone: +49 661 6003-0
 Fax: +49 661 6003-607
 Email: mail@jumo.net
 Internet: www.jumo.net

JUMO Instrument Co. Ltd.
 JUMO House
 Temple Bank, Riverway
 Harlow, Essex, CM20 2DY, UK
 Phone: +44 1279 63 55 33
 Fax: +44 1279 62 50 29
 Email: sales@jumo.co.uk
 Internet: www.jumo.co.uk




JUMO Process Control, Inc.
 6733 Myers Road
 East Syracuse, NY 13057, USA
 Phone: +1 315 437 5866
 Fax: +1 315 437 5860
 Email: info.us@jumo.net
 Internet: www.jumousa.com



Type 709065/X-0X-032-XX-XXX-XX

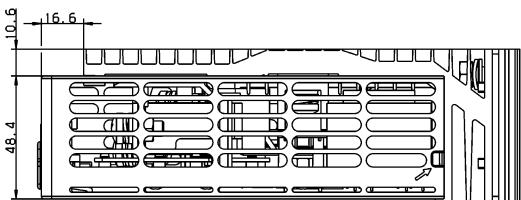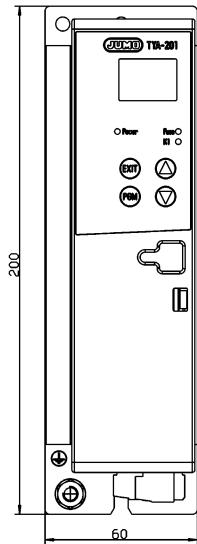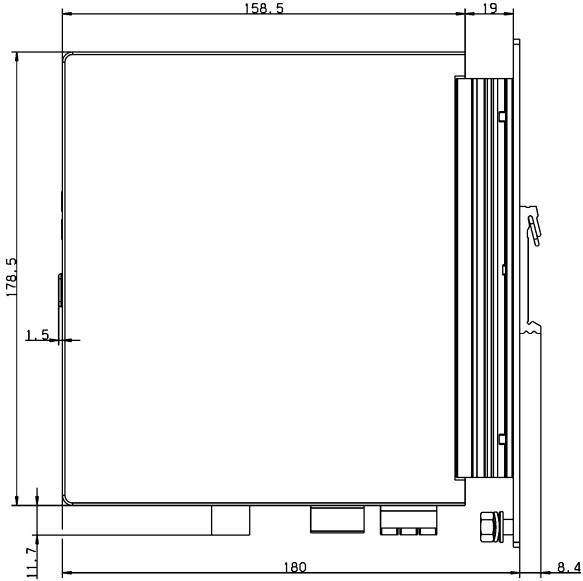

Type 709065/X-0X-050-XX-XXX-XX

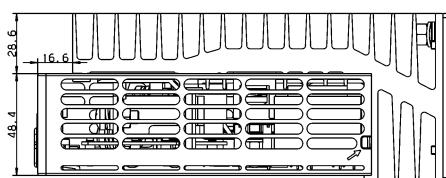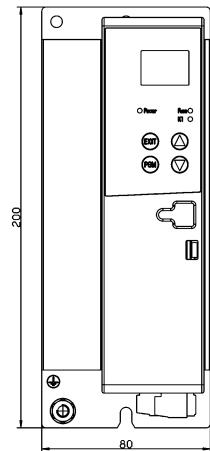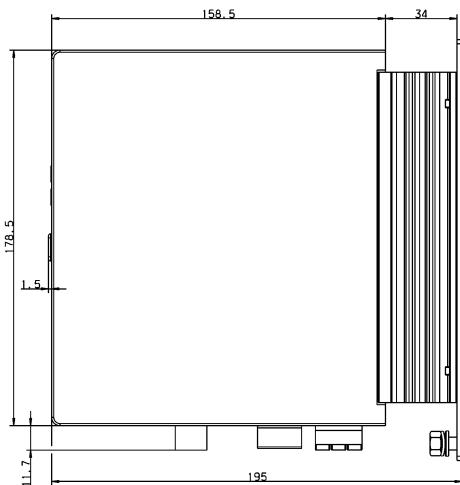


JUMO GmbH & Co. KG
Delivery address: Mackenrodtstraße 14
36039 Fulda, Germany
Postal address: 36035 Fulda, Germany
Phone: +49 661 6003-0
Fax: +49 661 6003-607
Email: mail@jumo.net
Internet: www.jumo.net

JUMO Instrument Co. Ltd.
JUMO House
Temple Bank, Riverway
Harlow, Essex, CM20 2DY, UK
Phone: +44 1279 63 55 33
Fax: +44 1279 62 50 29
Email: sales@jumo.co.uk
Internet: www.jumo.co.uk

JUMO Process Control, Inc.
6733 Myers Road
East Syracuse, NY 13057, USA
Phone: +1 315 437 5866
Fax: +1 315 437 5860
Email: info.us@jumo.net
Internet: www.jumousa.com



Type 709065/X-0X-100-XX-XXX-XX

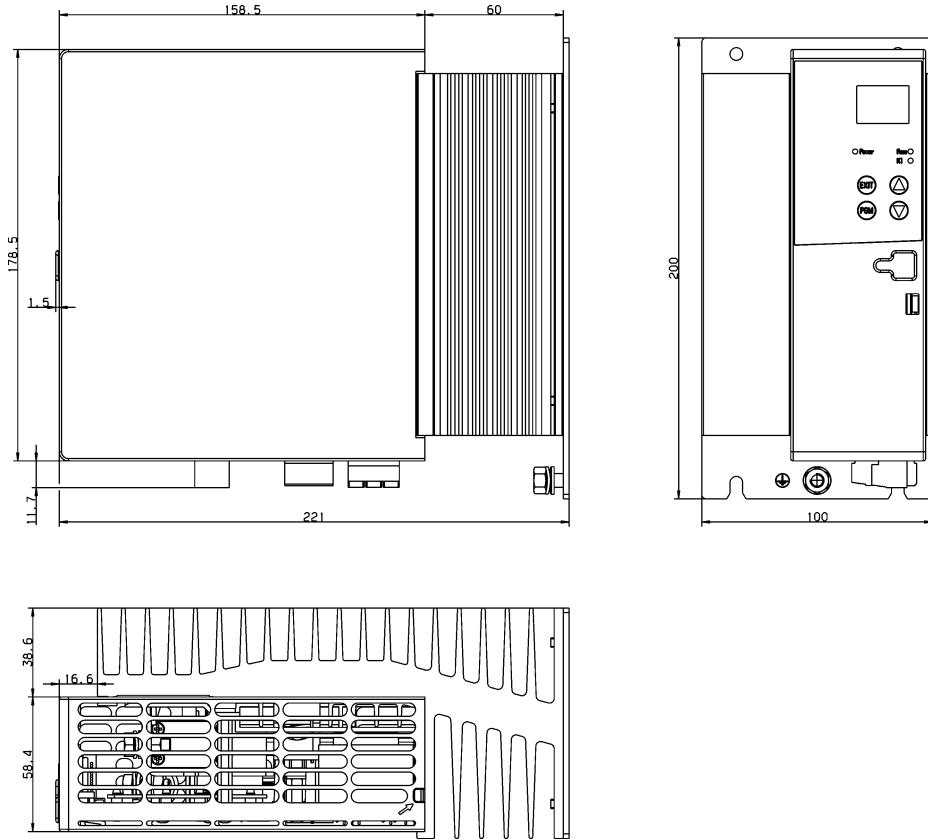

JUMO GmbH & Co. KG
 Delivery address: Mackenrodtstraße 14
 36039 Fulda, Germany
 Postal address: 36035 Fulda, Germany
 Phone: +49 661 6003-0
 Fax: +49 661 6003-607
 Email: mail@jumo.net
 Internet: www.jumo.net


JUMO Instrument Co. Ltd.
 JUMO House
 Temple Bank, Riverway
 Harlow, Essex, CM20 2DY, UK
 Phone: +44 1279 63 55 33
 Fax: +44 1279 62 50 29
 Email: sales@jumo.co.uk
 Internet: www.jumo.co.uk

JUMO Process Control, Inc.
 6733 Myers Road
 East Syracuse, NY 13057, USA
 Phone: +1 315 437 5866
 Fax: +1 315 437 5860
 Email: info.us@jumo.net
 Internet: www.jumousa.com



Type 709065/X-0X-150-XX-XXX-XX

Type 709065/X-0X-200-XX-XXX-XX

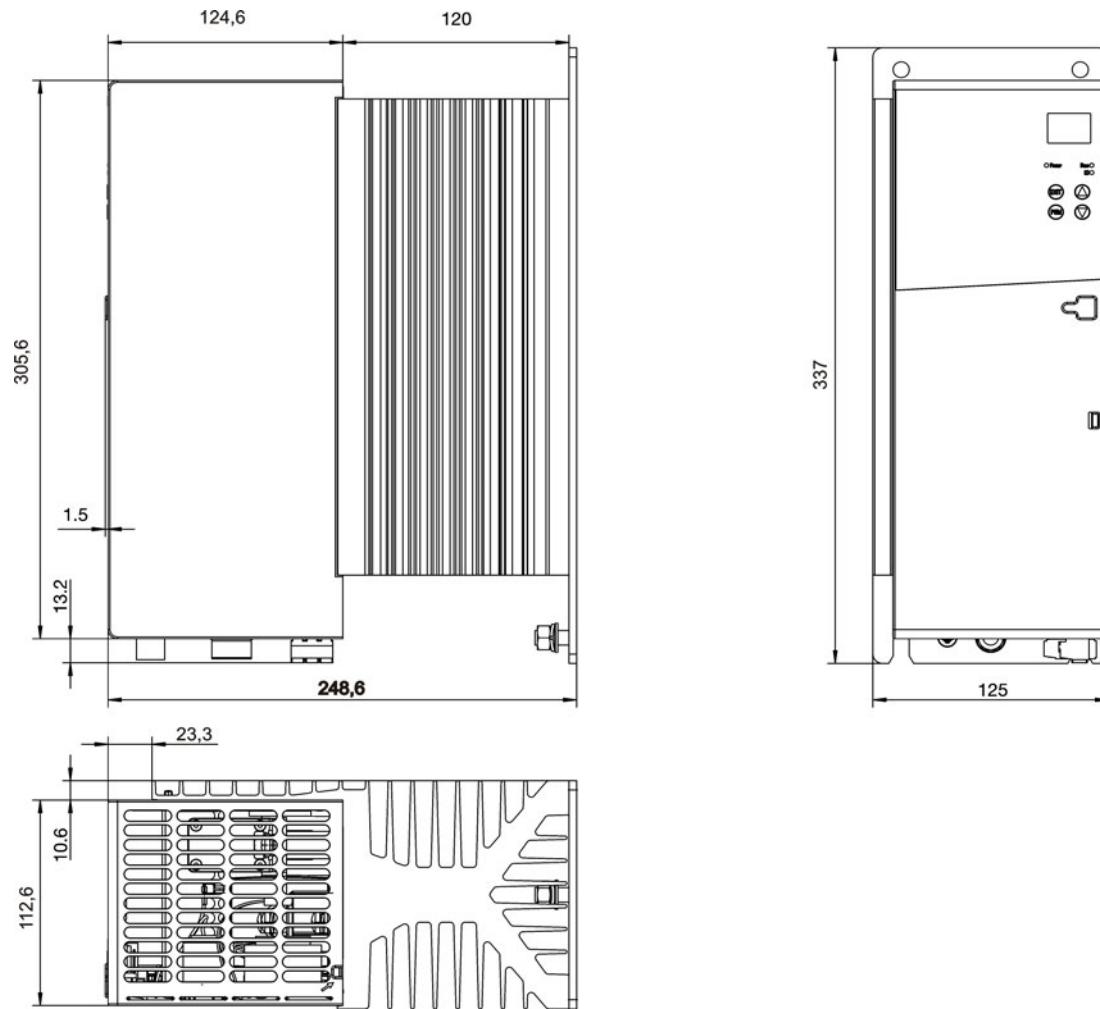


JUMO GmbH & Co. KG
 Delivery address: Mackenrodtstraße 14
 36039 Fulda, Germany
 Postal address: 36035 Fulda, Germany
 Phone: +49 661 6003-0
 Fax: +49 661 6003-607
 Email: mail@jumo.net
 Internet: www.jumo.net

JUMO Instrument Co. Ltd.
 JUMO House
 Temple Bank, Riverway
 Harlow, Essex, CM20 2DY, UK
 Phone: +44 1279 63 55 33
 Fax: +44 1279 62 50 29
 Email: sales@jumo.co.uk
 Internet: www.jumo.co.uk

JUMO Process Control, Inc.
 6733 Myers Road
 East Syracuse, NY 13057, USA
 Phone: +1 315 437 5866
 Fax: +1 315 437 5860
 Email: info.us@jumo.net
 Internet: www.jumousa.com



Type 709065/X-0X-250-XX-XXX-XX

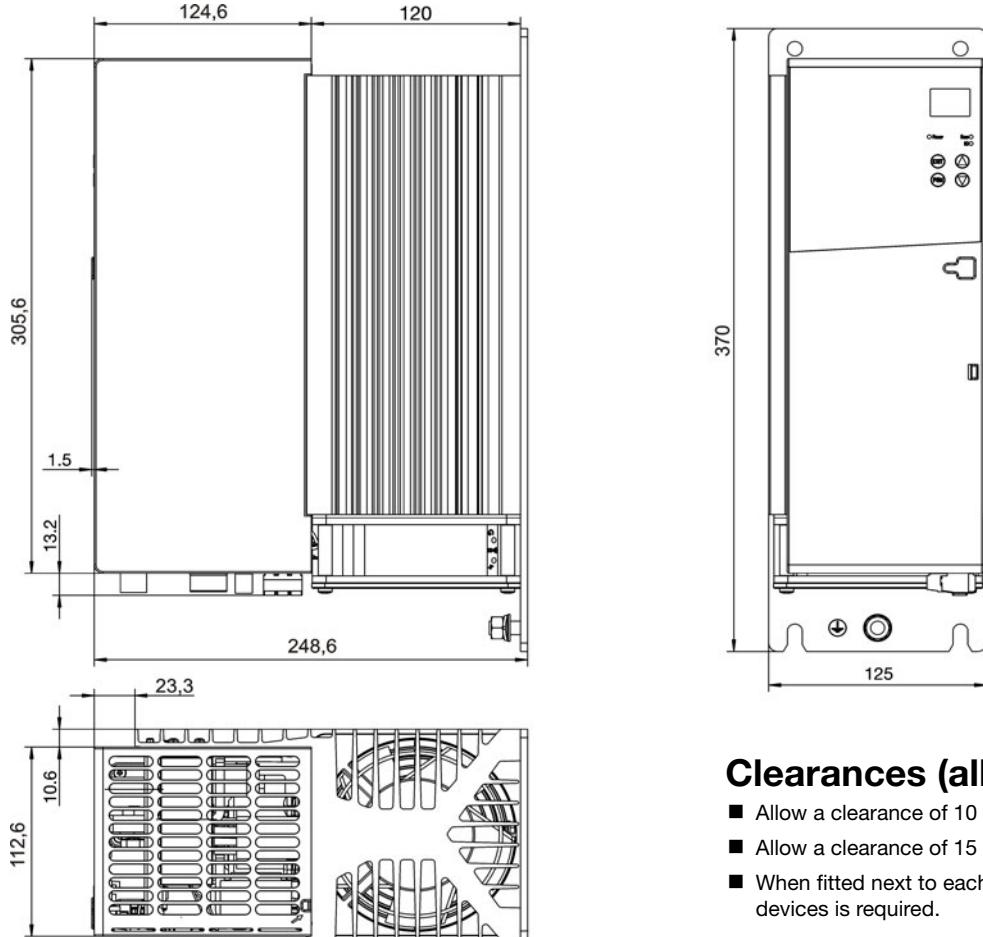

Maximum tightening torques for screw connections

Terminals	Version	Tightening torque
For all types X2_1 number 1 to 6, X2_2 number 7 to 12, and Modbus RS422/485 (terminal 16, 17, 18, 19)	Pluggable screw terminals (slotted screws)	0.25 Nm
X3 number 13, 14, 15	Pluggable screw terminals (slotted screws)	0.5 Nm
Type 709065/X-0X-020... Terminal block U1, U2, N/L2, V, L1 Ground terminal PE:	Pluggable screw terminals (recessed head screws) Threaded pin M4 with nut	0.6 Nm 3 Nm
Type 709065/X-0X-032 and type 709065/X-0X-050... U1, U2: Terminal block N/L2, V, L1 Ground terminal PE:	M6 recessed head screws Pluggable screw terminals (slotted screws) Threaded pin M6 with nut	5 Nm 0.5 Nm 5 Nm
Type 709065/X-0X-100... U1, U2: Terminal block N/L2, V, L1 Ground terminal PE:	Hex-headed screw M6, wrench size 10 mm Pluggable screw terminals (slotted screws) Threaded pin M6 with nut	5 Nm 0.5 Nm 5 Nm
Type 709065/X-0X-150..., 709065/X-0X-200, and type 709065/X-0X-250... U1, U2: Terminal block N/L2, V, L1 Ground terminal PE:	Hex-headed screw M8, wrench size 13 mm Pluggable screw terminals (slotted screws) Threaded pin M8 with nut	12 Nm 0.5 Nm 12 Nm

JUMO GmbH & Co. KG
 Delivery address: Mackenrodtstraße 14
 36039 Fulda, Germany
 Postal address: 36035 Fulda, Germany
 Phone: +49 661 6003-0
 Fax: +49 661 6003-607
 Email: mail@jumo.net
 Internet: www.jumo.net

JUMO Instrument Co. Ltd.
 JUMO House
 Temple Bank, Riverway
 Harlow, Essex, CM20 2DY, UK
 Phone: +44 1279 63 55 33
 Fax: +44 1279 62 50 29
 Email: sales@jumo.co.uk
 Internet: www.jumo.co.uk

JUMO Process Control, Inc.
 6733 Myers Road
 East Syracuse, NY 13057, USA
 Phone: +1 315 437 5866
 Fax: +1 315 437 5860
 Email: info.us@jumo.net
 Internet: www.jumousa.com




Terminals	Version	Tightening torque
Type 709065/X-0X-250... X14 number 20, 21	Pluggable screw terminals (slotted screws)	0.5 Nm

Connection diagram

The connection diagram in the data sheet provides preliminary information about the connection options. For the electrical connection, only use the installation instructions or the operating manual. The knowledge and the correct technical execution of the safety information and warnings contained in these documents are mandatory for installation, electrical connection, startup, and for safety during operation.

Type 709065/X-0X-020-XX-XXX-XX

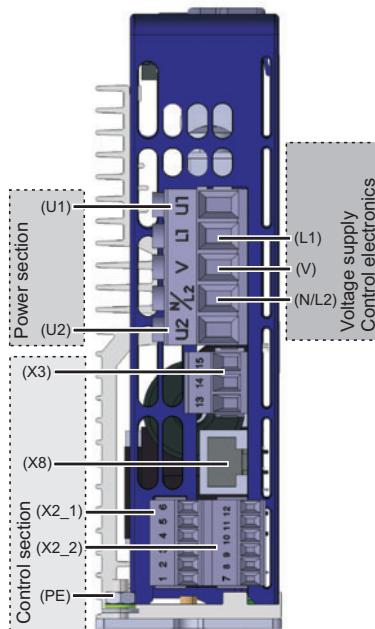

Power section

Connection for	Screw terminals, control section/power section	Detail
Voltage supply for control electronics (corresponds to the mains voltage of the ordered device type)	L1 N/L2 V	Phase (L1, L2, L3) —> ^{L1} TYA Phase (L1, L2, L3) oder N cond. (N) —> ^{N/L2} Control- Measuring load voltage —> ^V electronic
Load connection	U1 U2	Phase (L1, L2, L3) —> U1 Load —> U2 PE —> TYA
Protection conductor	PE	
Fan X14	20, 21 (only for load current of 250 A)	Voltage supply for fan —> 20 —> 21

Control section

Connection for	screw terminal X2_1	Detail
Setpoint specification for current input	1 2	—> I _x TYA Current-input

JUMO GmbH & Co. KG
 Delivery address: Mackenrodtstraße 14
 36039 Fulda, Germany
 Postal address: 36035 Fulda, Germany
 Phone: +49 661 6003-0
 Fax: +49 661 6003-607
 Email: mail@jumo.net
 Internet: www.jumo.net

JUMO Instrument Co. Ltd.
 JUMO House
 Temple Bank, Riverway
 Harlow, Essex, CM20 2DY, UK
 Phone: +44 1279 63 55 33
 Fax: +44 1279 62 50 29
 Email: sales@jumo.co.uk
 Internet: www.jumo.co.uk

JUMO Process Control, Inc.
 6733 Myers Road
 East Syracuse, NY 13057, USA
 Phone: +1 315 437 5866
 Fax: +1 315 437 5860
 Email: info.us@jumo.net
 Internet: www.jumousa.com



Setpoint specification for voltage input (surge proof up to max. DC 32 V)	3 (GND) 4	(for permanent control)	<p>TYA Voltage input external Setpoint specification with potentiometer</p>
Digital input PLC 0/24 V ON logical "1" = DC +5 to 32 V OFF logical "0" = DC 0 to < 5 V	3 (GND) 4	(for PLC logic signals)	
Output DC 10 V fixed voltage	5		
Ground potential	6 (GND)		

Connection for	screw terminal X2_2	Detail
Firing pulse inhibit ON logical "1" = DC 2 to 32 V OFF logical "0" = DC 0 to 0.8 V	8 (not for PLC logic signals)	<p>TYA</p>
GND	7, 11	Ground potential

Fault signal output

Connection for	screw terminal X3	Detail
Relay	13 N/O contact	<p>Relay output</p>
	14 N/C contact	
	15 Pole	

Interfaces (option)

Modbus connection	RS422	RS485	PROFINET
	TxD (-)	RxD/TxD B(-)	
	TxD (+)	RxD/TxD A(+)	1 TX+ 2 TX- 3 RX+ 6 RX-
	RxD (-)	-	Transmission data + Transmission data - Received data + Received data -
Pluggable screw terminals on the underside of the housing	RxD (+)	-	
The shield of the Modbus cables must be routed to ground potential (PE) (RS422/485 Modbus)			
2 RJ-45 sockets (on the front)			


JUMO GmbH & Co. KG
Delivery address: Mackenrodtstraße 14
36039 Fulda, Germany
Postal address: 36035 Fulda, Germany
Phone: +49 661 6003-0
Fax: +49 661 6003-607
Email: mail@jumo.net
Internet: www.jumo.net

JUMO Instrument Co. Ltd.
JUMO House
Temple Bank, Riverway
Harlow, Essex, CM20 2DY, UK
Phone: +44 1279 63 55 33
Fax: +44 1279 62 50 29
Email: sales@jumo.co.uk
Internet: www.jumo.co.uk


JUMO Process Control, Inc.
6733 Myers Road
East Syracuse, NY 13057, USA
Phone: +1 315 437 5866
Fax: +1 315 437 5860
Email: info.us@jumo.net
Internet: www.jumousa.com



Type 709065/X-0X-032-XX-XXX-XX

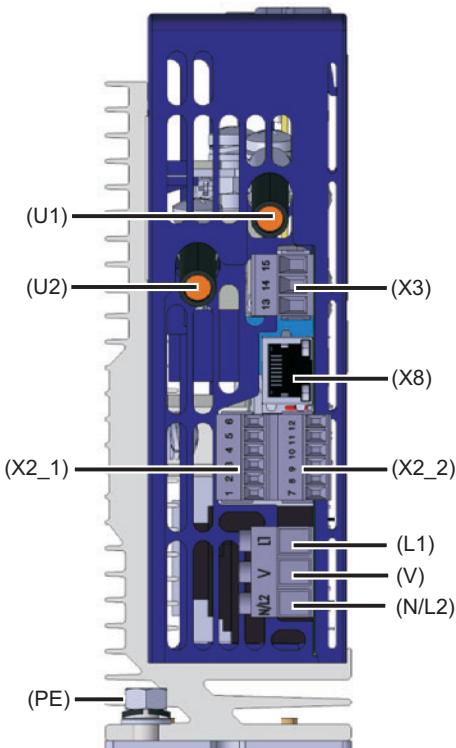

Type 709065/X-0X-050-XX-XXX-XX

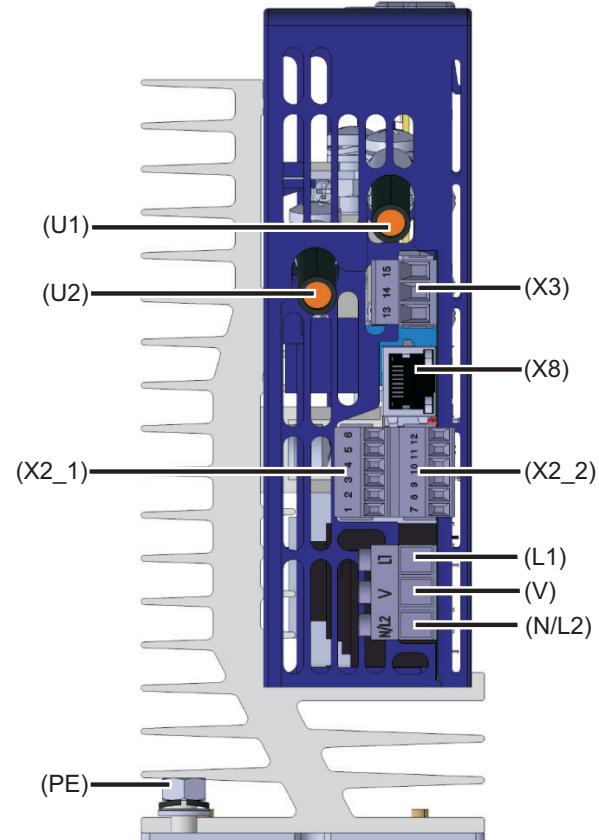


JUMO GmbH & Co. KG
 Delivery address: Mackenrodtstraße 14
 36039 Fulda, Germany
 Postal address: 36035 Fulda, Germany
 Phone: +49 661 6003-0
 Fax: +49 661 6003-607
 Email: mail@jumo.net
 Internet: www.jumo.net

JUMO Instrument Co. Ltd.
 JUMO House
 Temple Bank, Riverway
 Harlow, Essex, CM20 2DY, UK
 Phone: +44 1279 63 55 33
 Fax: +44 1279 62 50 29
 Email: sales@jumo.co.uk
 Internet: www.jumo.co.uk


JUMO Process Control, Inc.
 6733 Myers Road
 East Syracuse, NY 13057, USA
 Phone: +1 315 437 5866
 Fax: +1 315 437 5860
 Email: info.us@jumo.net
 Internet: www.jumousa.com



Type 709065/X-0X-100-XX-XXX-XX

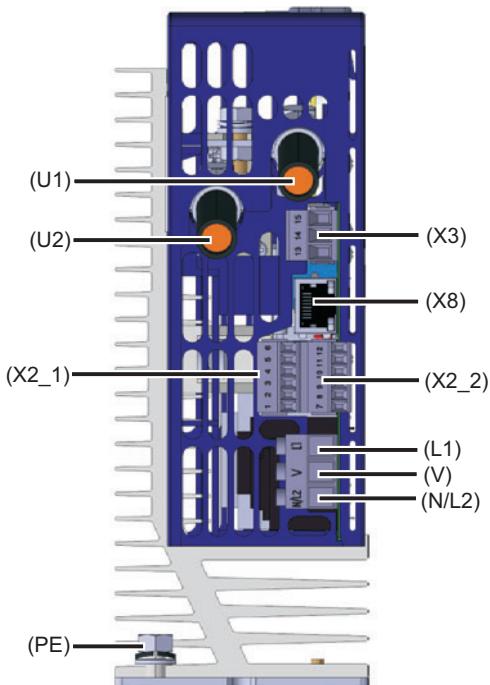

**Type 709065/X-0X-150-XX-XXX-XX,
 Type 709065/X-0X-200-XX-XXX-XX**

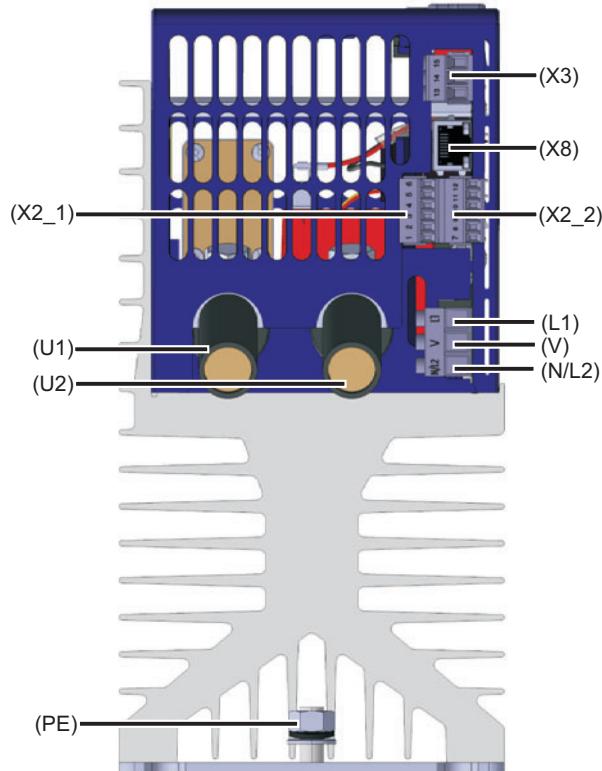


JUMO GmbH & Co. KG
 Delivery address: Mackenrodtstraße 14
 36039 Fulda, Germany
 Postal address: 36035 Fulda, Germany
 Phone: +49 661 6003-0
 Fax: +49 661 6003-607
 Email: mail@jumo.net
 Internet: www.jumo.net

JUMO Instrument Co. Ltd.
 JUMO House
 Temple Bank, Riverway
 Harlow, Essex, CM20 2DY, UK
 Phone: +44 1279 63 55 33
 Fax: +44 1279 62 50 29
 Email: sales@jumo.co.uk
 Internet: www.jumo.co.uk

JUMO Process Control, Inc.
 6733 Myers Road
 East Syracuse, NY 13057, USA
 Phone: +1 315 437 5866
 Fax: +1 315 437 5860
 Email: info.us@jumo.net
 Internet: www.jumousa.com



Type 709065/X-0X-250-XX-XXX-XX

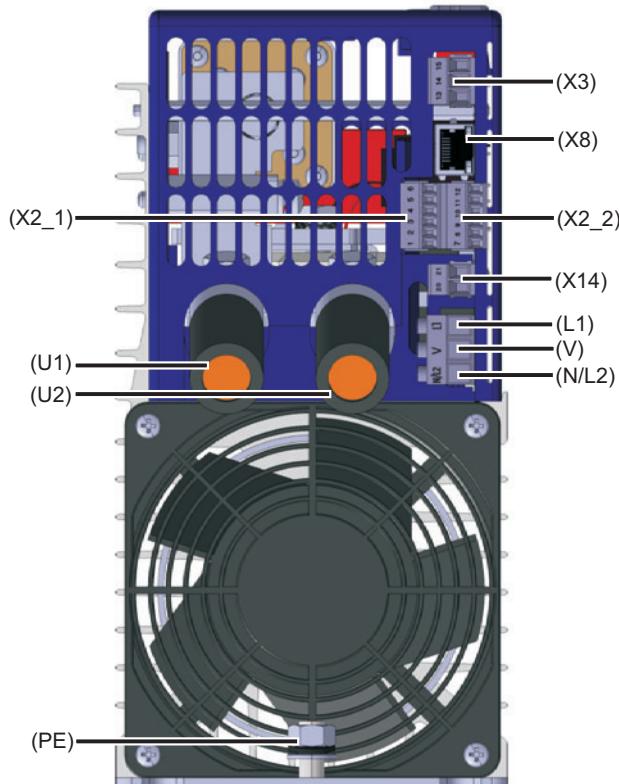

Example:

Fan voltage supply with type 709065/X-0X-250-XX-400-XX

Depending on the mains voltage of the power controller, the fan terminal X14 must be supplied with the voltage specified below.

The lead protection must be between **2 A and a maximum of 5 A**.


The fan is temperature-controlled, switches on automatically when the device temperature reaches 85 °C, and remains in operation until the device temperature falls below 70 °C.

Mains voltage of the power controller	Tolerances	Fan specifications
Mains voltage AC 230 V	-15 ... + 10 %, 48 ... 63 Hz	AC 230 V/30 VA
Mains voltage AC 400 V		
Mains voltage AC 460 V		
Mains voltage AC 500 V		

Wiring


Single-phase operation: phase / N

This switching example applies to the TN network. In the TT network, the N conductor must also be switched with S1 and S2.

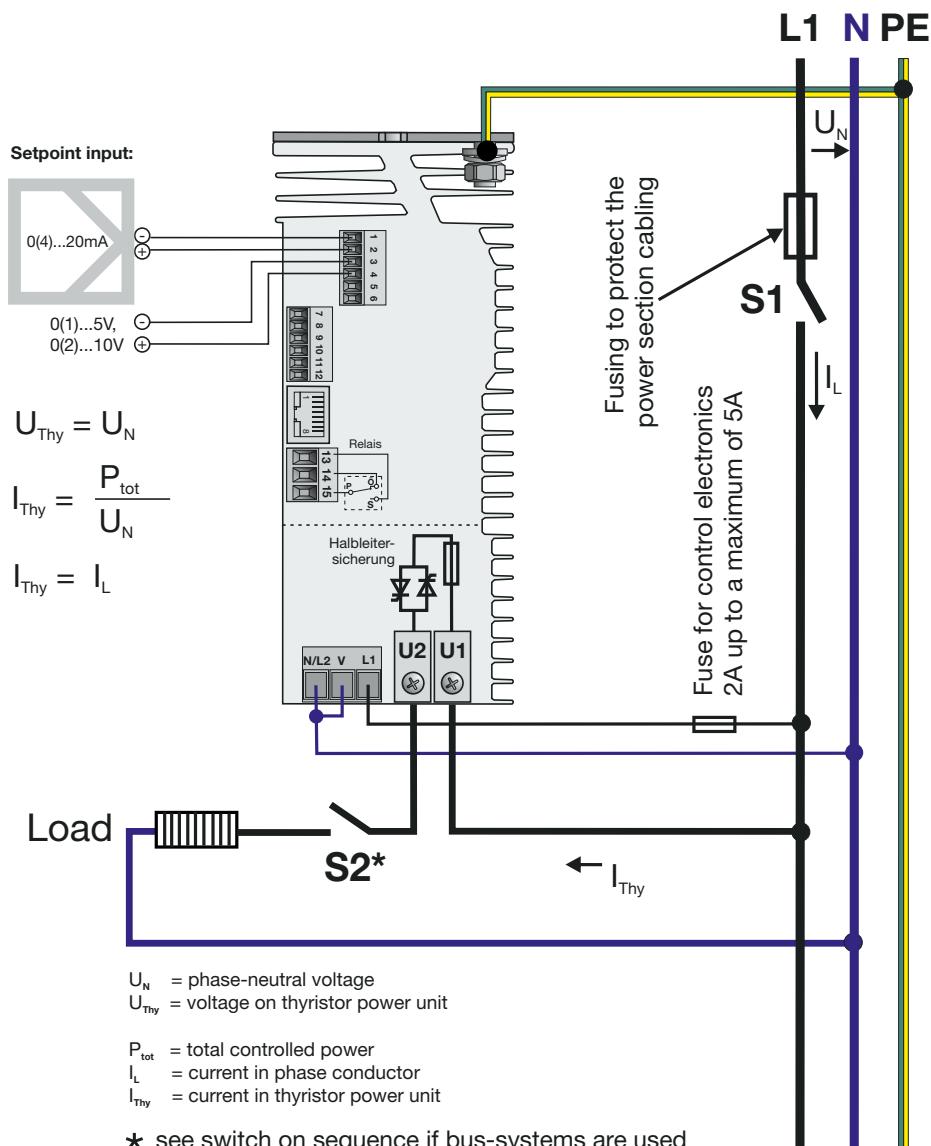

Important In the case of power controllers with a load current of 250 A, the fan terminal X14 must also be supplied with the specified voltage!
Information: \Rightarrow See "Example: Fan voltage supply with type 709065/X-0X-250-XX-400-XX" on page 14.


Single-phase operation: phase / phase

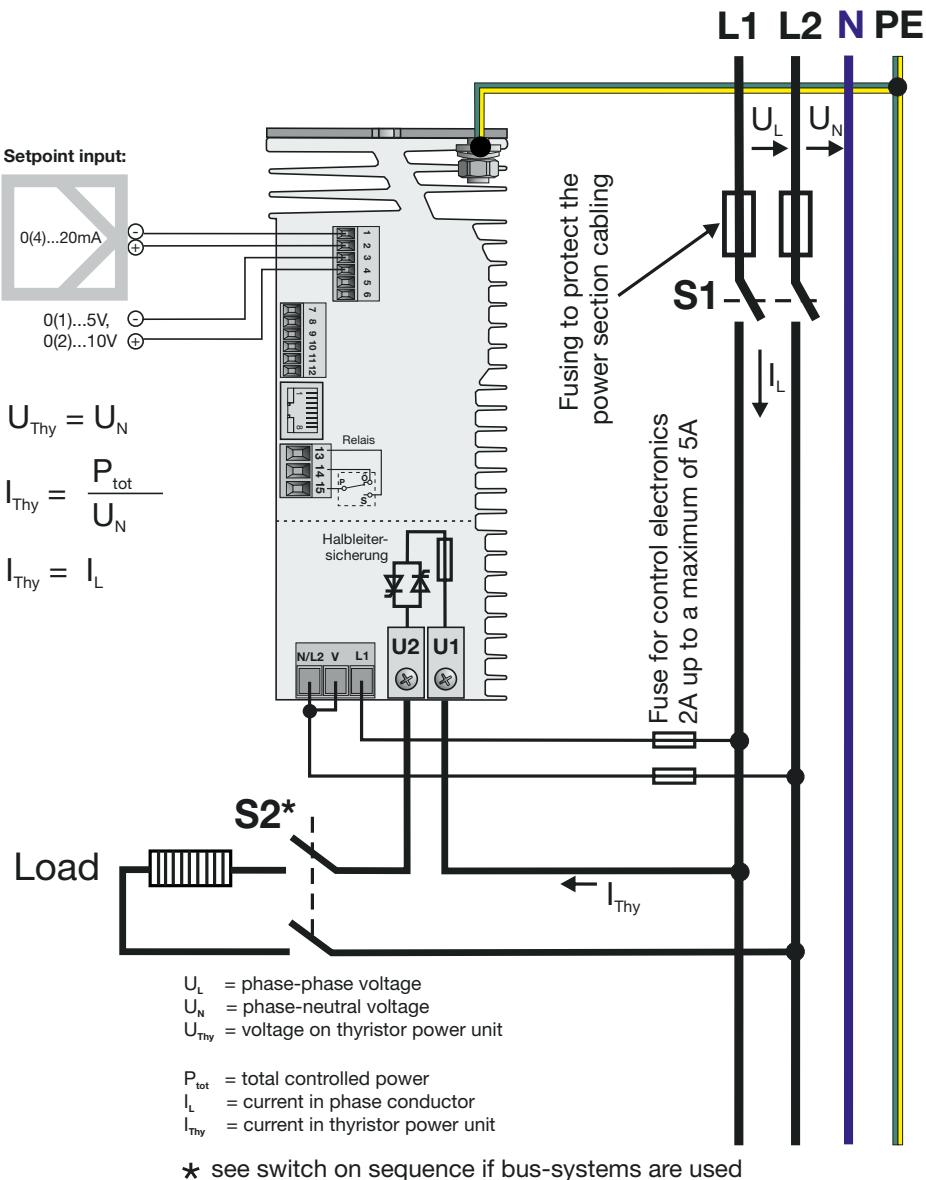

Important In the case of power controllers with a load current of 250 A, the fan terminal X14 must also be supplied with the specified voltage!
information: ⇒ See "Example: Fan voltage supply with type 709065/X-0X-250-XX-400-XX" on page 14.

Star connection with accessible star point (N)

This switching example applies to the TN network. In the TT network, the N conductor must also be switched with S1 and S2.

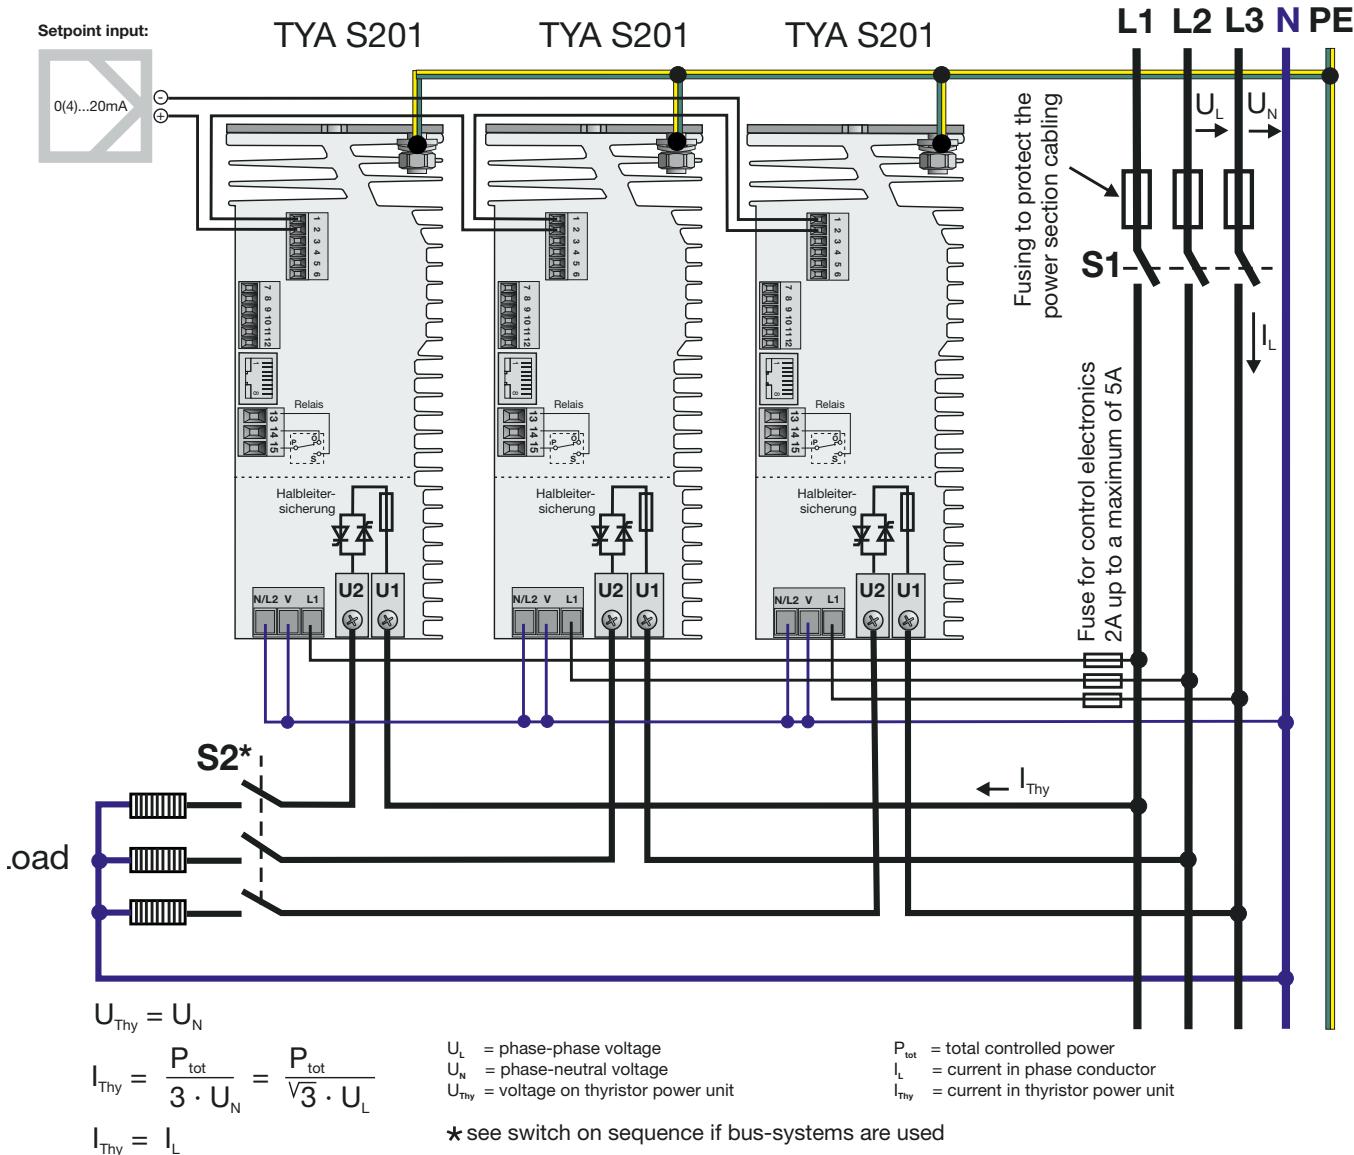

Important In the case of power controllers with a load current of 250 A, the fan terminal X14 must also be supplied with the specified voltage!
Information: ⇒ See "Example: Fan voltage supply with type 709065/X-0X-250-XX-400-XX" on page 14.


JUMO GmbH & Co. KG
 Delivery address: Mackenrodtstraße 14
 36039 Fulda, Germany
 Postal address: 36035 Fulda, Germany
 Phone: +49 661 6003-0
 Fax: +49 661 6003-607
 Email: mail@jumo.net
 Internet: www.jumo.net

JUMO Instrument Co. Ltd.
 JUMO House
 Temple Bank, Riverway
 Harlow, Essex, CM20 2DY, UK
 Phone: +44 1279 63 55 33
 Fax: +44 1279 62 50 29
 Email: sales@jumo.co.uk
 Internet: www.jumo.co.uk

JUMO Process Control, Inc.
 6733 Myers Road
 East Syracuse, NY 13057, USA
 Phone: +1 315 437 5866
 Fax: +1 315 437 5860
 Email: info.us@jumo.net
 Internet: www.jumousa.com



Open delta connection (six-wire connection)

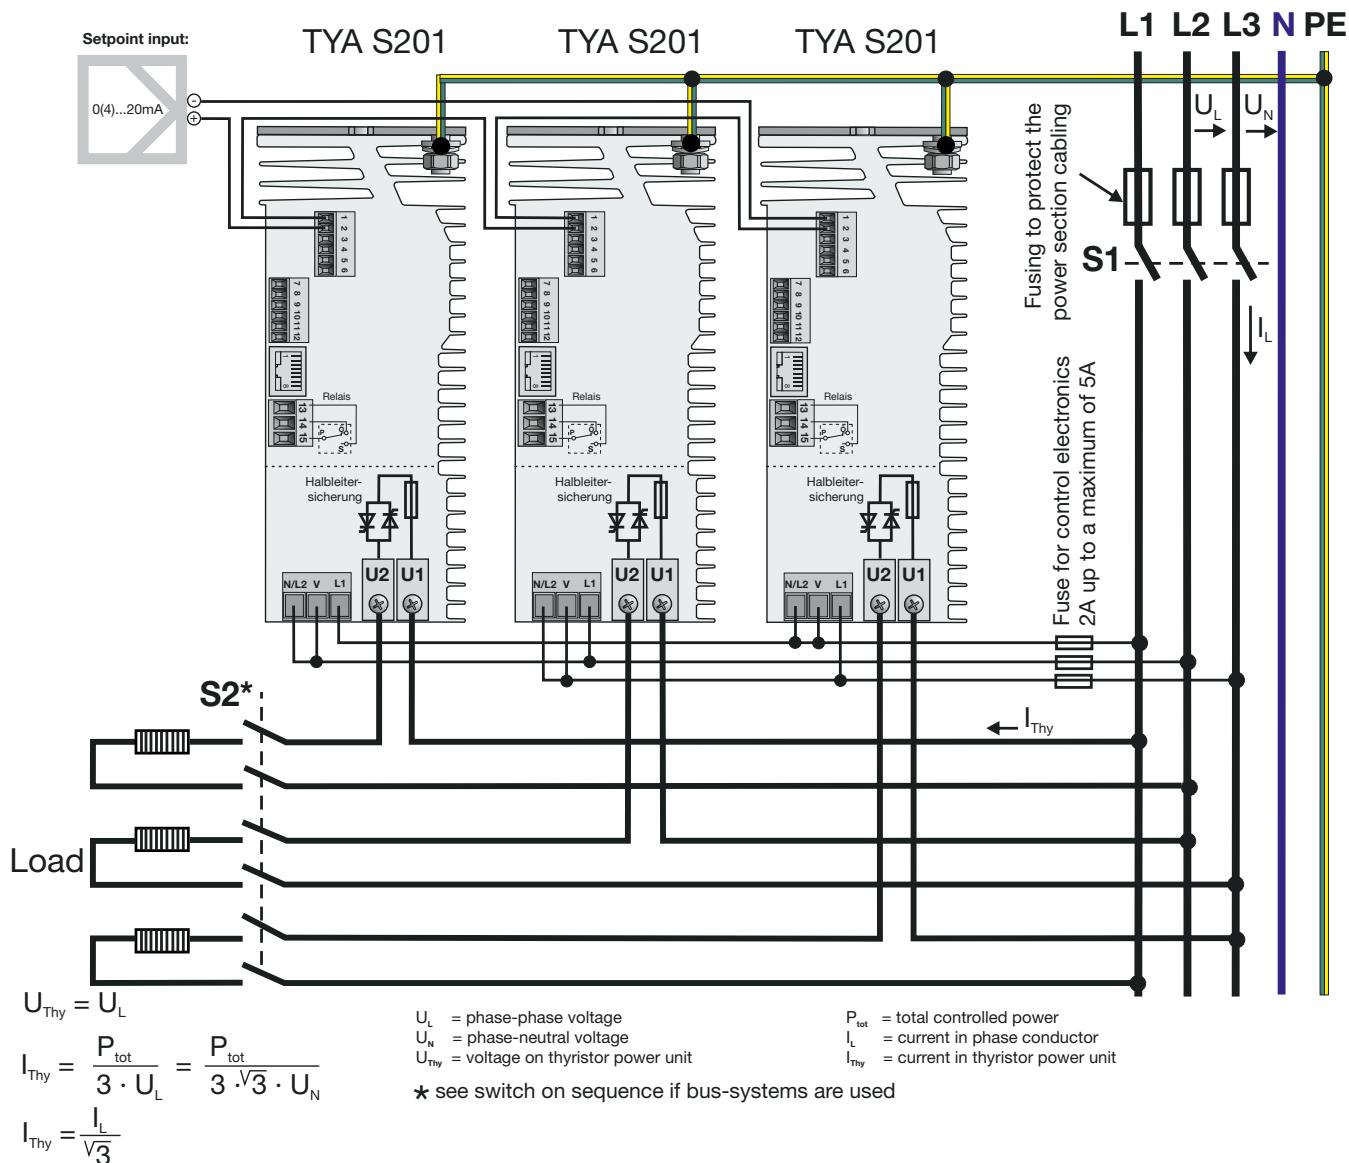

Important In the case of power controllers with a load current of 250 A, the fan terminal X14 must also be supplied with the specified voltage!
Information: \Rightarrow See "Example: Fan voltage supply with type 709065/X-0X-250-XX-400-XX" on page 14.

JUMO GmbH & Co. KG
 Delivery address: Mackenrodtstraße 14
 36039 Fulda, Germany
 Postal address: 36035 Fulda, Germany
 Phone: +49 661 6003-0
 Fax: +49 661 6003-607
 Email: mail@jumo.net
 Internet: www.jumo.net

JUMO Instrument Co. Ltd.
 JUMO House
 Temple Bank, Riverway
 Harlow, Essex, CM20 2DY, UK
 Phone: +44 1279 63 55 33
 Fax: +44 1279 62 50 29
 Email: sales@jumo.co.uk
 Internet: www.jumo.co.uk

JUMO Process Control, Inc.
 6733 Myers Road
 East Syracuse, NY 13057, USA
 Phone: +1 315 437 5866
 Fax: +1 315 437 5860
 Email: info.us@jumo.net
 Internet: www.jumousa.com



Observe the general switch-on sequence If a bus system is not used then the switch **S2** is omitted. The switch **S1** simultaneously switches on the control section and power section. This is particularly important for the operation of transformer loads and resistance loads with a high temperature coefficient (TC >> 1). This makes sure the necessary load start functions (soft start) are activated accordingly.

Switch-on sequence when using bus systems When using a bus system, the control section and power section are switched on via **S1** and **S2**. The **TYA control section must always remain connected to the mains voltage** (e.g. **S1** always closed) in order to maintain the fieldbus communication.

S2 is used to activate the load.

When dealing with transformer loads or loads with a high temperature coefficient (TK >> 1), prior to opening **S2** the power control output must be locked through the inhibit input.

After closing **S2**, the inhibit input must also be reactivated.

Important information: In the case of power controllers with a load current of 250 A, the **fan terminal X14** must also be supplied with the specified voltage. See "Example: Fan voltage supply with type 709065/X-0X-250-XX-400-XX" on page 14.

Order details

(1) Basic type

709065 | TYA S201 single-phase thyristor power controller

(2) Version

8	Standard with default settings
9	Customer-specific programming according to specifications

(3) National language of device texts

01	German (default setting)
02	English
03	French
14	Spanish

(4) Load current

020	AC 20 A
032	AC 32 A
050	AC 50 A
100	AC 100 A
150	AC 150 A
200	AC 200 A
250	AC 250 A

(5) Partial load failure monitoring

00	None
01	Partial load failure monitoring

(6) Mains voltage^a

230	AC 230 V	-20 ... +15 %, 48 ... 63 Hz
400	AC 400 V	-20 ... +15 %, 48 ... 63 Hz
460	AC 460 V	-20 ... +15 %, 48 ... 63 Hz
500	AC 500 V	-20 ... +15 %, 48 ... 63 Hz

(7) Interface

00	None
54	RS485/422
63	PROFINET available as of XXXXXX

(1) / (2) - (3) - (4) - (5) - (6) - (7)

709065 / 8 - 01 - 100 - 01 - 400 - 00

Order code

Order example

^a Mains voltage = Voltage supply for control electronics

JUMO GmbH & Co. KG
 Delivery address: Mackenrodtstraße 14
 36039 Fulda, Germany
 Postal address: 36035 Fulda, Germany
 Phone: +49 661 6003-0
 Fax: +49 661 6003-607
 Email: mail@jumo.net
 Internet: www.jumo.net

JUMO Instrument Co. Ltd.
 JUMO House
 Temple Bank, Riverway
 Harlow, Essex, CM20 2DY, UK
 Phone: +44 1279 63 55 33
 Fax: +44 1279 62 50 29
 Email: sales@jumo.co.uk
 Internet: www.jumo.co.uk

JUMO Process Control, Inc.
 6733 Myers Road
 East Syracuse, NY 13057, USA
 Phone: +1 315 437 5866
 Fax: +1 315 437 5860
 Email: info.us@jumo.net
 Internet: www.jumousa.com



Scope of delivery

1 operating manual
1 thyristor power controller in the version ordered

Accessories

Item	Part no.
Setup program 709065 (TYA S201) and 709066 (TYA S202)	00544869
USB cable A-connector B-connector 3 m	00506252
Installation kits:	
Installation kit for DIN rail 20 A TYA 201	00555169
Installation kit for DIN rail 32 A TYA 201	00555526
Installation kit for DIN rail 50 A TYA 201	00600095

General accessories

Item	Load current $I_{\text{Rated}} = I_N$	Part no.
709710/02 semiconductor fuse 40 A / AC 690 V	$I_N = 20 \text{ A}$	00513108
709710/02 semiconductor fuse 80 A / AC 690 V	$I_N = 32 \text{ A}$	00068011
709710/02 semiconductor fuse 80 A / AC 690 V	$I_N = 50 \text{ A}$	00068011
709710/02 semiconductor fuse 160 A / AC 690 V	$I_N = 100 \text{ A}$	00081801
709710/02 semiconductor fuse 350 A / AC 690 V	$I_N = 150 \text{ A}$	00083318
709710/02 semiconductor fuse 550 A / AC 690 V	$I_N = 200 \text{ A}$	00371964
709710/02 semiconductor fuse 550 A / AC 690 V	$I_N = 250 \text{ A}$	00371964